


Portable DVD Player with ATSC TV

User Manual

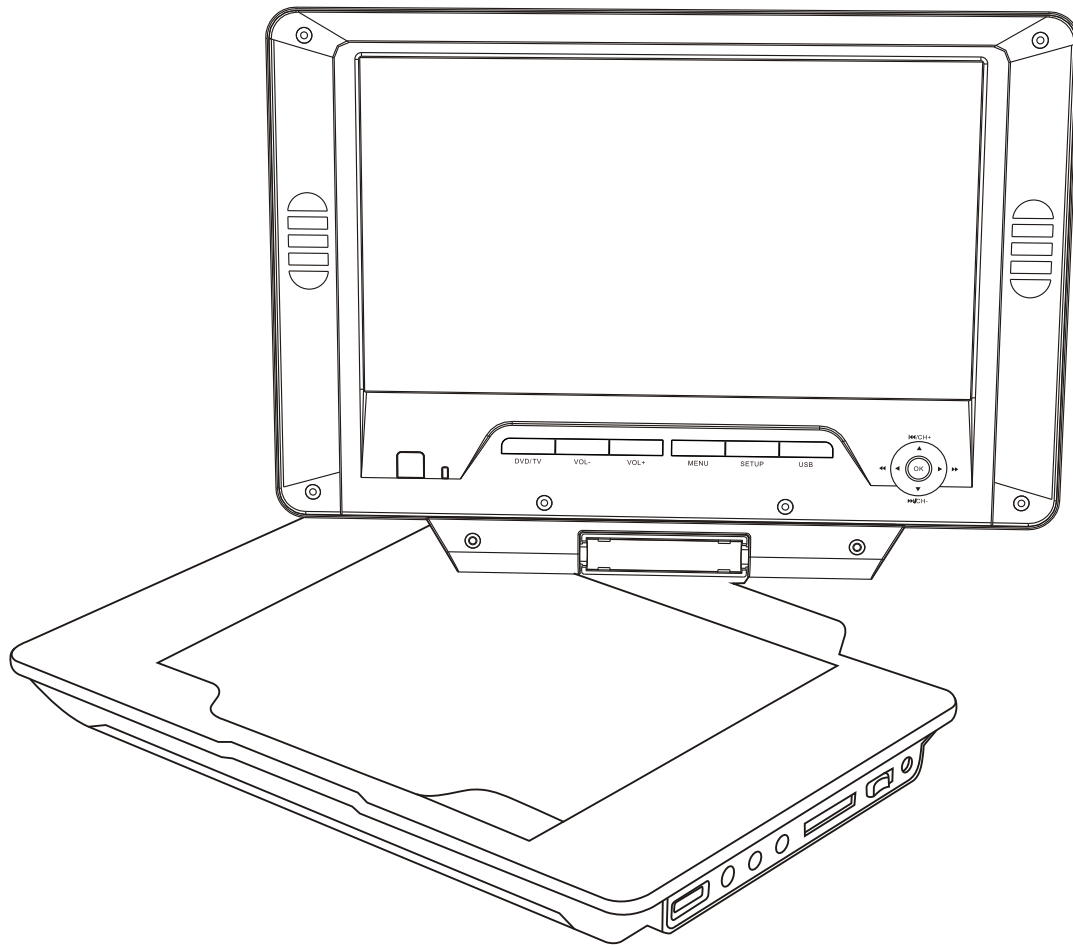

Thank you for purchasing this product.

For your safety and best performance, please read this instruction before first use. Please keep this manual for future reference.

In case that you have any further questions after reading this manual, please contact: 1-866-709-1999 or email: service@envizendigital.com



Table of Contents

Safety Precautions	
1.1 Safety precautions.....	1
Introduction to the Product	
2.1 Features.....	3
2.2 Important information.....	4
2.3 The device and accessories.....	5
Functional Overview	
3.1 Device overview.....	6
3.2 Remote control	7
3.3 Power supply connection.....	8
3.4 Rechargeable internal battery.....	8
Digital TV	
4.1 First time installation.....	9
4.2 Channel scan.....	10
4.3 Volume control.....	10
4.4 Channel select.....	10
4.5 Favorite channel list.....	11
4.6 Rename.....	12
4.7 Sort.....	12
4.8 Move.....	13
4.9 Setup menu.....	13
4.10 Timer.....	14
4.11 Guide (Electronic program guide).....	14
DVD/CD Player	
5.1 DVD playback.....	16
5.2 Information display.....	17
5.3 Audio function.....	18
5.4 Subtitles function.....	18
5.5 Repeat function.....	19
5.6 Guide function.....	20
5.7 General setup menu.....	21
5.8 Audio setup menu.....	24
5.9 Video setup menu.....	24
5.10 Preference setup menu.....	26
USB/CARD Reader	
6.1 USB/Card.....	30
AV output	
7.1 AV output connection.....	31
Troubleshooting.....	32
Technical Specifications.....	33
Warranty.....	34



▶ Safety Precautions

▶ 1.1 Safety Precautions

▶ **Safety Guidelines**

Congratulations on purchasing this product. We are sure that you will be entirely satisfied with this DVD player. Thank you for your confidence.

Please read this instruction carefully in order to use the appliance at its full performance.



This symbol indicates the presence of conductive electrical currents inside the appliance that could cause a risk of electric shock.



Processing with electric and electronic devices in end-of-life (applicable to the European Union and to other European countries which have a selective waste collection system).

This symbol affixed on the product or to its packing indicates that the product must not be processed with other domestic waste. It must be disposed in a proper collecting point for the recycling of electric and electronic devices. Making sure that this product is disposed of properly, you will make an important contribution to the prevention of the potentially negative consequences for the environment and human health. Recycling materials will help maintain natural resources. For any further information regarding the recycling of this product, you can contact your municipality, waste reception centre, or the store where the product was purchased.

	⇒ In case this product malfunctions, please do not attempt to repair it yourself. Opening the appliance may expose you to a risk of electric shock.
	⇒ Do not use this device near heat sources especially hot air ducts, cookers or any other appliance generating heat. Please note that this device cannot be exposed to temperatures lower than -5° or higher than 40 celsius either.
	⇒ Do not use this appliance near a wet area such as bathtub, sink, swimming pool or vase.
	⇒ Do not touch the power cord if your hands are wet. Do not use a damaged cord.
	⇒ Do not use products containing alcohol, gasoline, detergent or other flammable products clean the surface of the appliance.
	⇒ Do not drop the device or hit it. By doing so could seriously damage it.
	⇒ Do not let liquids or any foreign object in the appliance. Otherwise, it may cause a short-circuit, risk of electric shock or even fire.
	⇒ Do not cut, damage or place any heavy objects on the power cord. This may result in a risk of electric shock or fire.



▶ Safety Precautions

▶ 1.1 Safety Precautions

▶ Use and safety precautions for this appliance

Location: Place the device on a surface, far from magnetic fields. Do not put any heavy objects on the unit.

Ventilation: The unit must be located in a well-ventilated area. Leave a space of about 6 inches at the rear and on top of the appliance and a space of 4 inches on both sides. Do not place the device on a bed, a blanket or any other similar surface, which could block ventilation for the unit. Do not install the product in a bookcase, in a piece of furniture or a closed shelf, because that would impede ventilation. In order to avoid any internal overheating, do not cover the ventilation openings of the rear panel.

Condensation: Humidity might form on the reading lens when the unit is taken from a cold place to a warm place. If condensation has formed inside the device it might not work correctly. In case this happens, do not use the device for a few hours.

Power source: Only use this unit with one of the power sources specified in the user's guide and on the identification label.

Power cord: To unplug the power cord, pull it by the plug. Never pull the cord itself. Never touch the main power plug if your hands are wet as this could cause an electric shock or a fire. Power cords must be correctly fixed in order to prevent them from being damaged. Avoid overloading wall outlets and extension cords beyond their capacity as this could cause fire or electric shock.

Power supply: When you do not use the device, unplug the power cord from the wall outlet. When the power cord is plugged in, a weak current flows inside the unit even if the unit is switched off. In case of storm, immediately unplug the Power cord from the wall outlet.

TFT LCD colour screen: Do not place a heat source near the screen. Do not touch the screen with a pointed object. Some lighted or dark spots may occur on the screen, but this is normal. Your unit is not defective or dead.

Battery: The battery must be fully charged for at least 2.5 hours before you use the device. Do not place the battery near a heat source. The unit works properly as long as the player is stored between -5° and $+40^{\circ}\text{C}$.

CLASS 1 LASER PRODUCT

This unit employs a laser. Due to possible eye injury, only qualified service personnel should remove the cover or attempt to service this device. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



AVOID EXPOSURE- Visible laser radiation is emitted from this aperture.

▶ 2

▶ Introduction to the Product

▶ 2.1 Features

This unit uses a colour LCD TFT technology and has a Dolby Digital recoder to bring you quality Audio/Video and Home Theater products.

- ATSC digital TV, DVD player, Card-reader/USB all-in-one
- Built-in 2.5 hours continuous playing
- AV out -outputs your DVD movie to big screen TVs
- Supports disc formats: DVD/DivX/XviD/VCD/CD/CD-G/PictureCD/HDCD/SVCD/CD-R/RW/JPEG
- Car headrest mounting carrying case
- Supports 9 inch LCD TFT full swivel widescreen display
- Supports 2 in 1 (MMC/SD) card reader
- Supports USB 2.0
- Supports auto scan / channel scan
- Supports Electronic Program Guide
- Supports OSD multi-language
- Supports channel control/channel edit/program timer
- Supports memory play
- Built-in speaker & headphone output
- Supports linear 2-channel audio output
- Supports intelligent charging function
- Supports screen ratio : 4:3 & 16:9

▶ 2

▶ Introduction to the Product

▶ 2.2 Important Information

▶ Formats/Compatible codes

LOGO	CODECS/FORMATS	COMPATIBILITY
	DIVX 3-4-5-6xx	✓
MPEG4	MPEG4	✓
	VIDEO DVD	✓
	DVD+R DVD+R/RW	✓
	DVD-R DVD-R/RW	✓
	VCD: video CD SVCD: super video CD	✓
	JPEG photo type	✓
	USB2.0	✓
	SD/MMC	✓

▶ 2

▶ Introduction to the Product

▶ 2.3 The Device and Accessories




ED8890A



Remote Control



User Manual

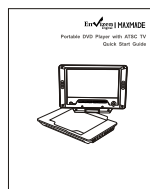

Quick Start Guide



AC Adapter



Car Adapter



A/V Cables



Antenna Connector



Antenna




Car Bag


▶ 3 ▶ Functional Overview

▶ 3.1 Device Overview

▶ Front Panel

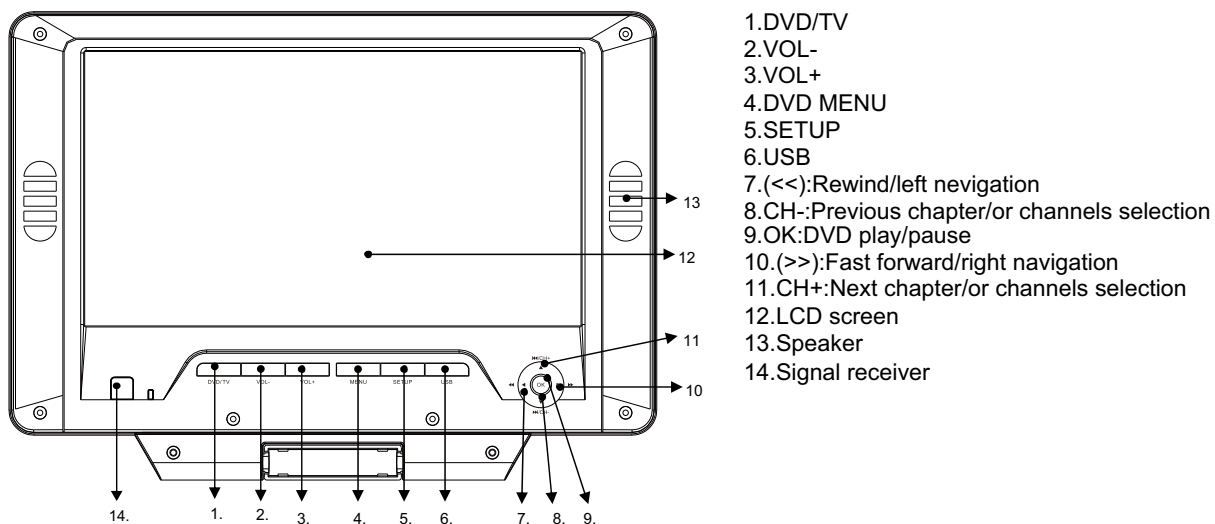


▶ Side panel

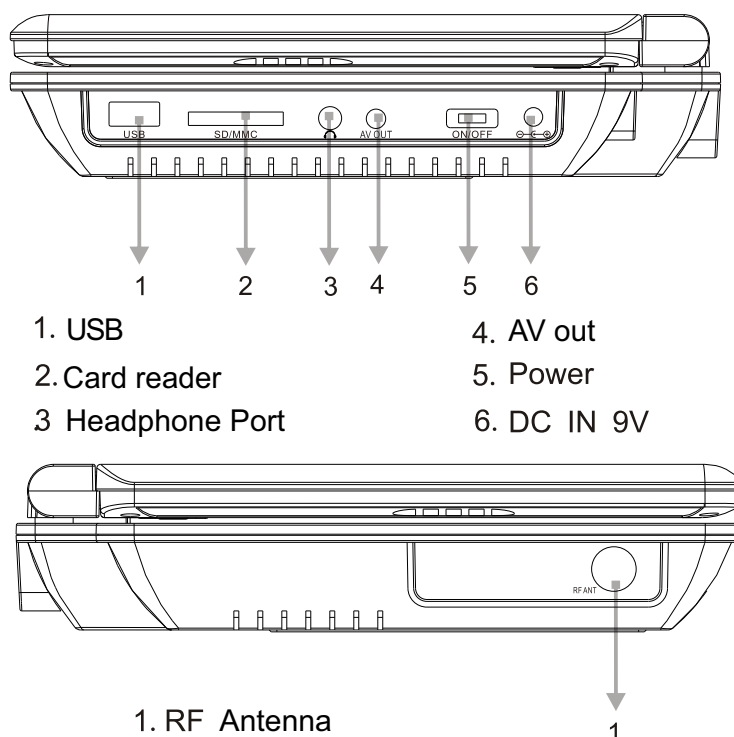


▶ 3 Functional Overview

▶ 3.2 Remote Control

▶ Remote control functions

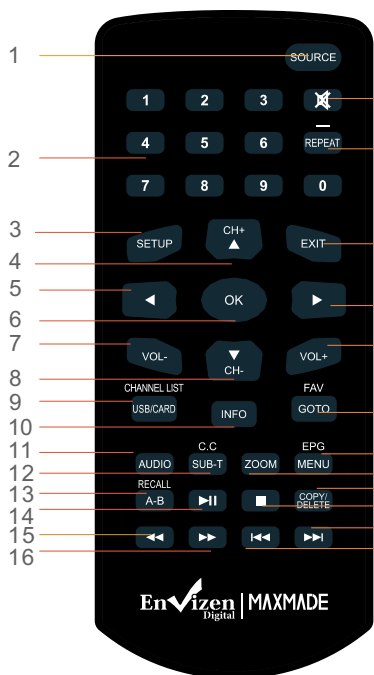- 
1. Switch DVD/TV button
 2. Number Keys
 3. SETUP
 4. Up/Channel up
 5. Direction Key
 6. Play(DVD MODE) channel list (ATSC MODE)
 7. Volume DOWN
 8. Down/Channel down
 9. Switch USB/card(DVD mode)/Channel list(ATSC)
 10. Play Information
 11. Switch languages that the disc supports
 12. Switch OSD languages on the DVD mode/Closed caption(ATSC)
 13. Recall channel playback(ATSC)/A-B(DVD mode)
 14. PLAY/PAUSE
 15. Fast backward
 16. Fast forward
 17. Mute
 18. Repeat chapter (DVD)
 19. Exit
 20. Direction Key
 21. Volume UP
 22. GOTO: Search progress on the DVD mode
Setup favorite programs(ATSC)
 23. Menu playback(DVD),
Electronic Program Guide(ATSC)
 24. Zoom in(DVD)
 25. Copy/Delete(DVD)
 26. STOP
 27. Skip forward
 28. Skip backward

▶ Remote control use

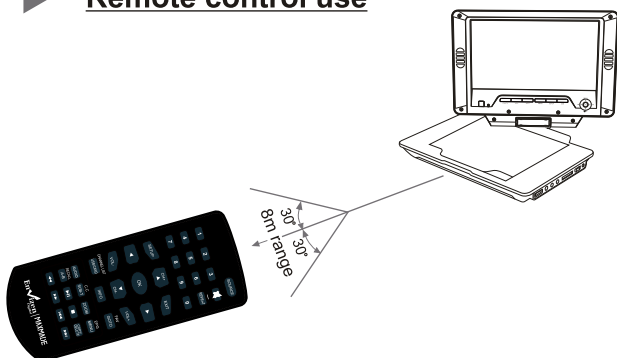

▶ 3


▶ Functional Overview

▶ 3.3 Power Supply Connection

You have 3 options to supply power for the device.

▶ AC Adapter

Connect the power supply cord to the 9-12 volts input of the product then plug the power supply cord to a main power outlet. While this device is charging through the AC adapter, the internal battery will be charged at the same time. The Built-in rechargeable battery allows portable usage for up to 2.5 hours.

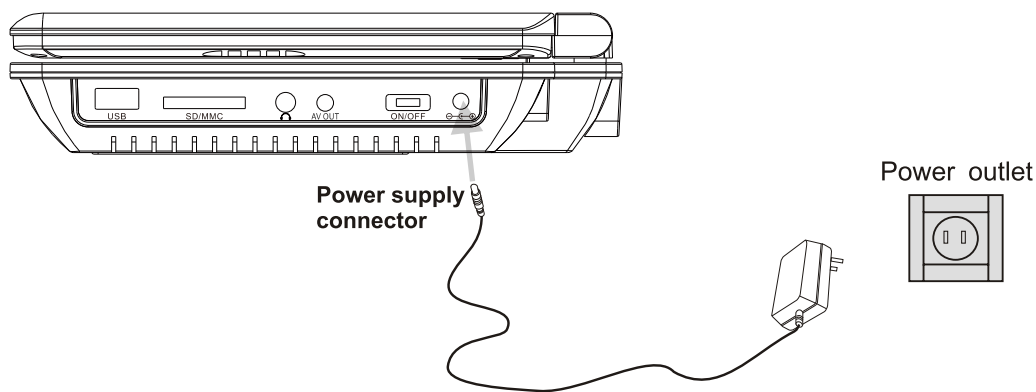


▶ Car Adapter

Connect the car adapter (supplied with your device) as indicated below.

Caution! Do not use any other cords but the one supplied with your product.

The power supply voltage is 9-12 Volts, you must check if your vehicle voltage complies with this range before connecting. Be sure to unplug the adapter when you leave the vehicle.

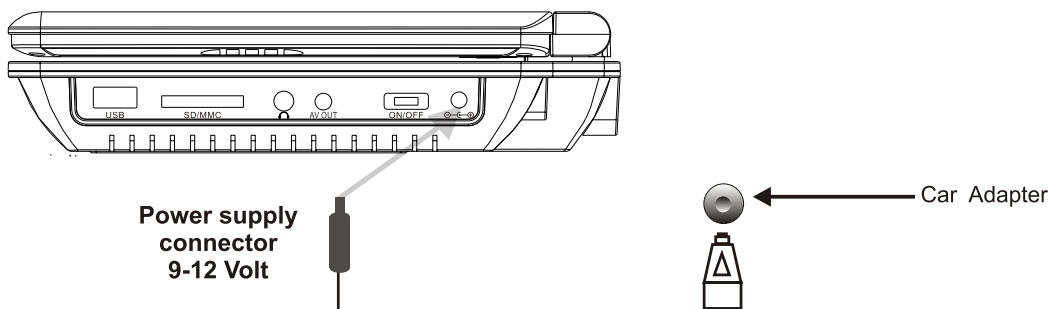

▶ 3.4 Rechargeable Internal Battery

Operating instructions: The internal battery automatically charges when the device is connected to the AC adapter through a main power outlet. The internal rechargeable battery lasts up to 2.5 hours while fully charged.

Warning: To prevent fire or shock hazard, do not expose the device to water, rain, or moisture.

Never expose battery pack to temperature above 140 °F.

Do not disassemble.

Do not incinerate.

▶ 4

▶ Digital TV

Digital TV is a new broadcast system for TV stations intended to replace the analog NTSC television system in United States. The technical standard for Digital TV is defined by the Advanced Television Systems Committee (ATSC).

An advantage of digital TV broadcasting is that each broadcaster can now send multiple channels. For example, a broadcaster might air its main program on channel 8-1, while airing its weather segment on channel 8-2 at the same time.


For best use of our Envizen Digital Quartet Series, we wanted to provide you some helpful tips to maximize digital airwaves for the digital TV function to enhance your viewing experience with the quartet.

- Digital airwaves are not always consistent and vary depending on where you are. In some areas, digital signals are picked up more easily if you are closer to a TV broadcast station, giving you a clear TV picture. However, in other areas, digital signals may further away.
- Reception can also be affected by weather, terrain, trees, buildings. Any small adjustment to the direction or height of the antenna can make a large difference.
- It is helpful to position the magnetic external antenna by a window, a doorway, or an external wall to pick up the maximum amount of receptions in a room.
- It helps to stick the antenna to a metal object so it stays on magnetically. This turns that object into a larger antenna that will allow you to receive more digital airwaves.
- When you turn on your digital TV function, go to the Menu option and press "auto-scan". This automatically searches for all available channels in your area. Do a periodic auto-scan to see if any new stations are available in your area.
- For more information or to check how strong the digital airwave reception is in your area at this website: www.dtv.gov or www.antennaweb.org

If you are still having difficulties, please contact us and one of our technicians will be glad to assist you (866)709-1999.

▶ 4.1 First Time Installation

1. When the Unit is switched on for the first time, a "Welcome Page" will be displayed.

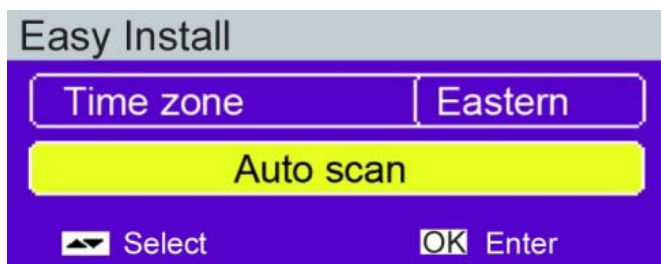


2. Use the arrow keys ▲▼◀▶ to select the "Region".
3. Move highlight to "Search" button and press "OK" to begin the channel scan.


▶ 4 Digital TV

▶ 4.2 Channel Scan

There are two different ways to Scan Channels. Press SETUP on the remote/device, then In the Main Menu→Channel Scan→Auto Scan, Move the highlight bar to "search" button. Press the [OK] key to scan all the Channels.

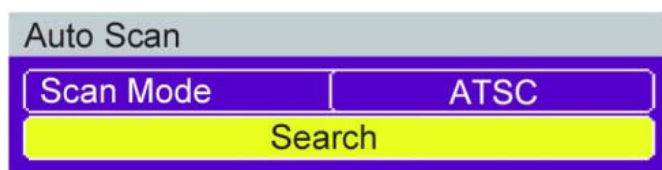

Main Menu→Channel Scan→Manual Scan,select the appropriate parameter. Move the highlight bar to "search" button. Press [OK] key to scan Channels.

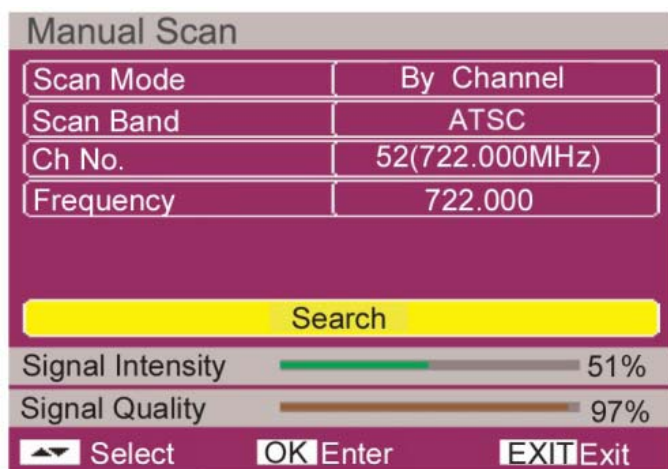

▶ 4.3 Volume Control

Use the "VOL+" and "VOL-" keys to increase or decrease the volume.



By pressing the "Mute"  key, the audio will be turned off. Press the "Mute"  again or press the Volume Keys to turn on the audio.

▶ 4.4 Channel Select

You can change the channel in different ways:

1. Press the "OK" key to display the List of Channels.

▶ 4 Digital TV



Use the arrow keys " ▲ " or " ▼ " to navigate through the channel list. When you reach the channel you would like to watch, Press "OK" key.

2. Press CH+ or CH- to move next or previous channel.

3. Press the "Recall" key to return to the previous channel you watched.

▶ 4.5 Favorite Channel List

You can create up to 8 Favorite Channel groups. To place a channel in a Favorite Channel Group, press "1" to edit the channel. When it asks for a password, input "0000". Then, select the channel you would like to select as your favorite, and press "1". You will be asked which group you would like to place.

To access your favorite channel groups, press the " ◀ " or " ▶ " key on the TV channel list to switch between groups.



▶ 4 Digital TV

To switch between All Channel List and Favorite Channel List, press the “▶” or “◀” key to switch to your favorite channel groups.



▶ 4.6 Rename



In the "TV Channel List", press "1" to edit the channel.

Pressing number "5" key, it will show a "Rename" window and you can rename the highlighted channel.

Press ▲▼◀▶ key to move the highlight in "Rename" window. Press "OK" to enter.

Move the highlight to "OK" and press "OK" key to save the modification.

Move the highlight to "ESC" and press "OK" key to cancel the operation.

▶ 4.7 Sort

▶ 4 Digital TV



In the "TV Channel List", press "3" to sort channels.
It will display a dialogue to confirm. If you select "Yes", it will display "Sort" box.
Press ▲ or ► key to move the highlight and press "OK" to select sort type such as Default/
Name(A-Z)/ Name(Z-A)/Lock.

▶ 4.8 Move




In the "TV Channel List", press "4" to move channels.
Press number key "4" , it will show a "moving mark" in the right side of the selected channel like above.
You can move the selected channel to the position that you want to place by press ▲▼ key.
And press "OK" key to confirm your decision.

▶ 4.9 Setup Menu

Press the "SETUP" key to activate the main menu. Select the "Setup" option and press the "OK" key to enter the System Setup.

▶ 4 Digital TV

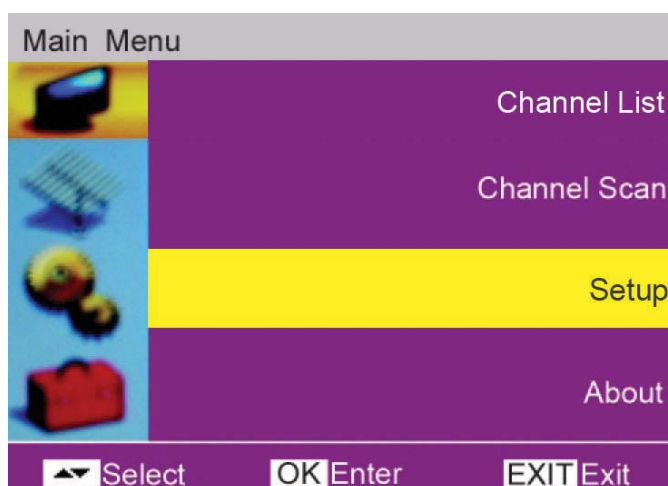

Change OSD Language

Change Screen Ratio

Set the region and time


Timer Setting: for more information, refer to the next section.

Channels or Menu operations can be locked using password. The original password is "0000".

▶ 4.10 Timer

In Main Menu → Setup → Timer Setting, →: Program Timer .

Program Timer: In this menu, you can set a maximum of 8 timers to turn on the Unit for viewing.

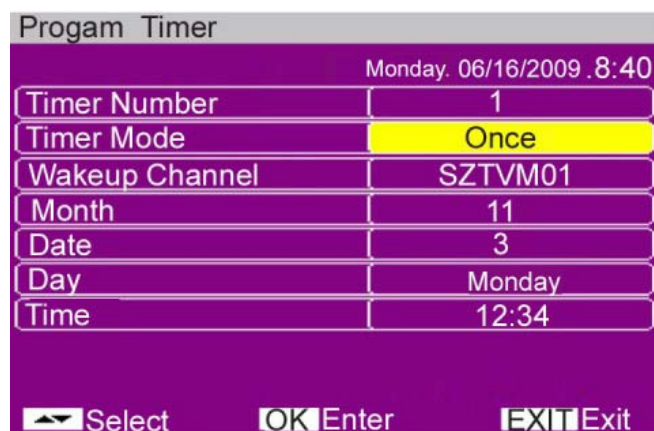


▶ 4.11 Guide (Electronic Program Guide)

Press the "Guide" key to display all channel information.

▶4

▶ Digital TV

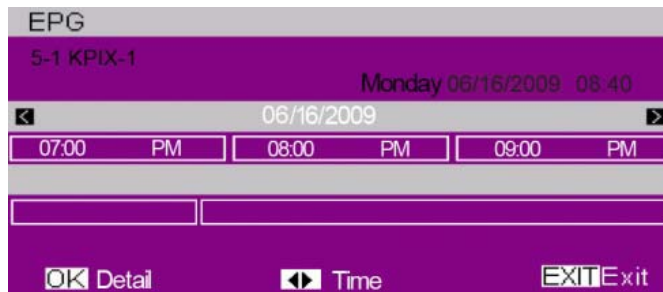


1. The product has an Electronic Program Guide “EPG” to help you navigate channels through all the possible viewing options. The “EPG” provides information such as program listings, program summaries, start times, end times, and parental guideline ratings.
2. Press “OK” key can see the program detail information.
3. Press ◀▶ key can switch time by hour.
Press ▲▼ can switch time by day.
4. Press “Menu” key to exit.

▶ 5 ▶ DVD/CD Player


▶ 5.1 DVD Playback

1

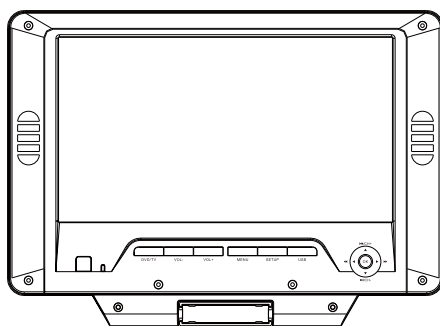

Open the cover of the DVD player

2

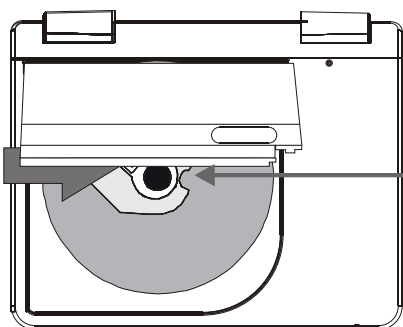


Remove the plastic cover





WARNING:
PLEASE TAKE OUT THIS
CARD BEFORE PLAYBACK

3



Turn on the power

4

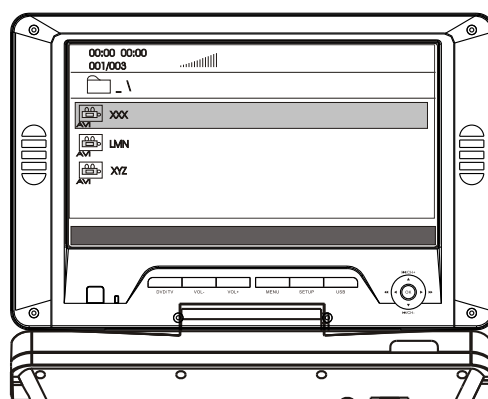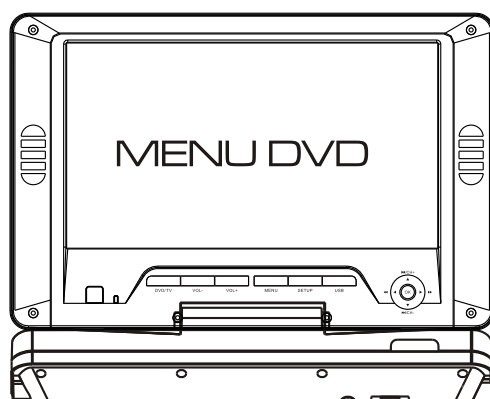

When you are playing a commercial DVD, the menu is displayed automatically.


When you are playing a DVD-R, CD, etc. a menu like the one above is displayed on the screen.

Select the file that you want to play with the ▲ or ▼ arrows on the remote control or with the ◀ or ▶ arrows on the player then press ENTER.

▶ 5 ▶ DVD/CD Player

▶ 5.2 Information Display

The display of the tracks contained on your CDs will be shown as follows:

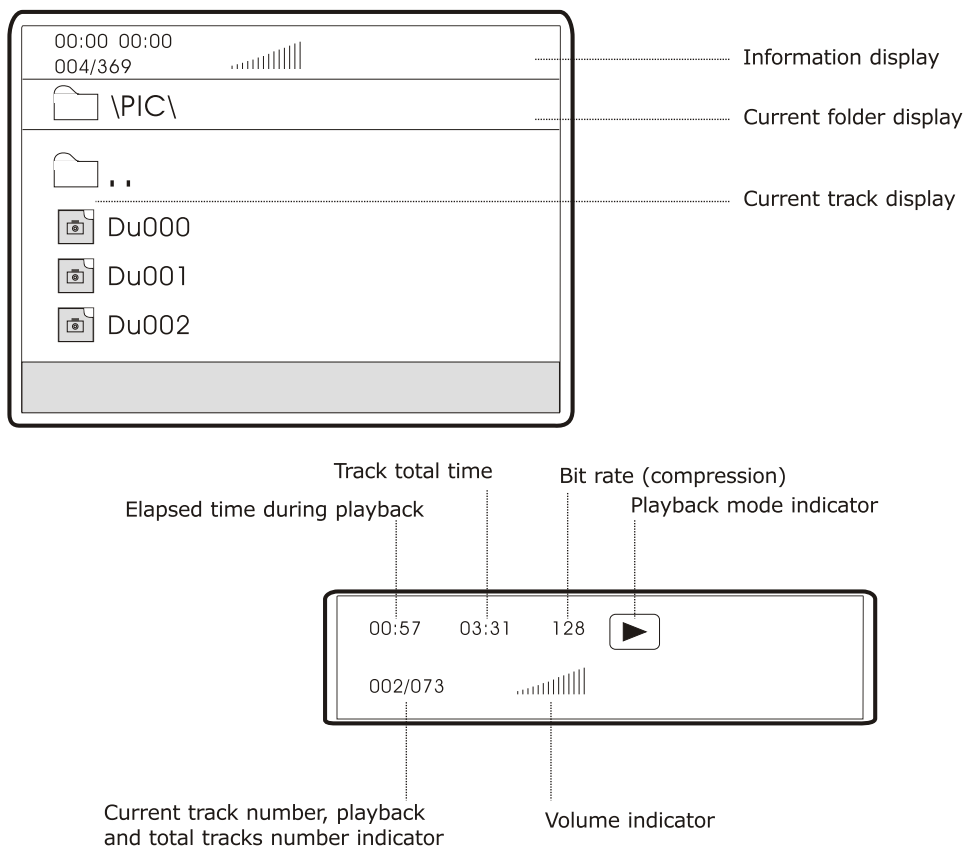

▶ 5 DVD/CD Player

▶ 5.3 Audio Function

Press the AUDIO key on your remote control to switch between available audio tracks on your DVD. This list of audio tracks is specified on DVD sleeve.

Note: Some DVDs do not support this function.




▶ 5.4 Subtitles Function

Press the SUB-T key to switch the subtitle languages.

To remove subtitles, press the SUB-T key until you get the following information "Subtitle off".

Note: To display the subtitle of a film, the DVD must have the subtitle feature.

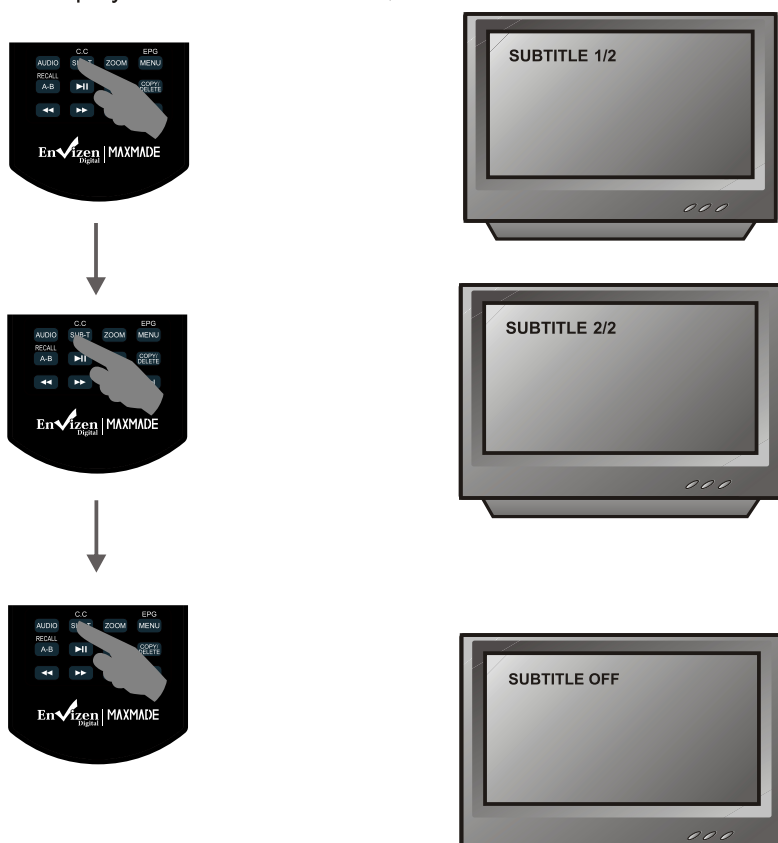


▶ 5 ▶ DVD/CD Player

▶ 5.5 Repeat Function

Press the REPEAT key to play the chapter, title or film again.
By pressing several times, you can select the type of repetition that you want.
To stop, press REPEAT one last time. Displayed are the following options.

DVD

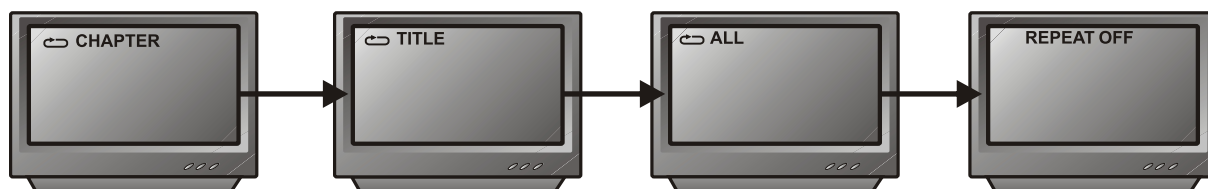

SVCD VCD AUDIO CD



▶ 5 DVD/CD Player

▶ 5.6 Guide Function

When you are playing a DVD, you can display the time and playback information by pressing the INFO key on the remote control.



1. Press the INFO key once to display the current title, chapter number and the elapsed time.
2. Press the INFO key twice to display the chapter elapsed time.
3. Press the INFO key three times to display the chapter remaining time.
4. Press the INFO key four times to display the title elapsed time.
5. Press the INFO key five times to exit that menu.


Note: On the mode of VCD/SVCD/AUDIO CD, the information display will be shown as follows:



▶ 5 DVD/CD Player

The setup menu consists of four sub-menus, General Setup, Audio Setup, Video Setup, and Preference Setup.

This menu is accessible with the **SETUP** button on the remote control and on the device. To navigate through the different sub-menus, use the ◀ and ▶ arrows; to navigate through the different options of the sub-menus, use the ▲ and ▼ arrows on the remote control.

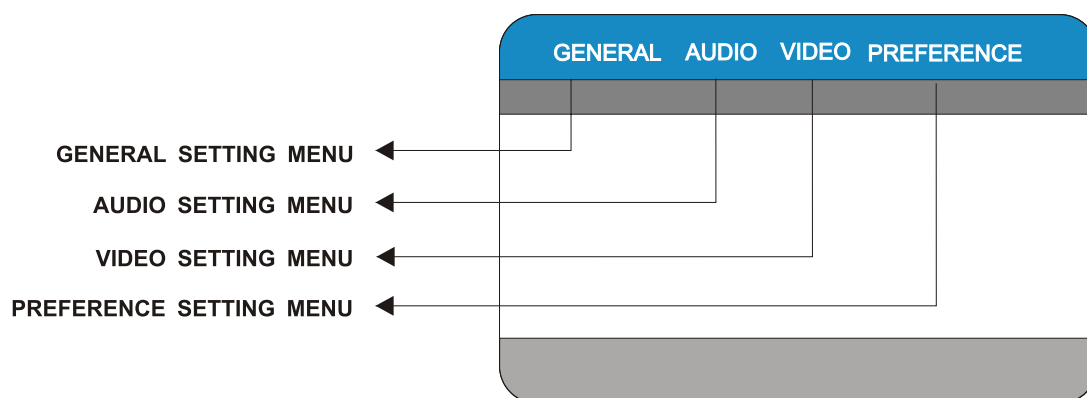

▶ 5.7 General Setup Menu

The setup menu consists of four sub-menus, General Setup, Audio Setup, Video Setup, and Preference Setup.


GENERAL		AUDIO		VIDEO		PREFERENCE	
GENERAL SETUP PAGE							
TV DISPLAY				16:9			
OSD LANGUAGE				ENG			
SCREEN SAVER				ON			
CD				1X			
LAST MEMORY				OFF			
GOTO GENERAL SETUP PAGE							

1. **TV DISPLAY**: This option allows you to switch among 4:3 Pan Scan 4:3 letter Box and 16:9 Large.
2. **OSD LANGUAGE**: This option allows you to select the menu display language.
3. **SCREEN SAVER**: This option allows you to activate the screen saver to prevent damage to the TV screen.
4. **CD**: To set the sampling frequency of HDCD decoding in 44.1KHz (1X) or 88.1KHz (2X).
5. **LAST MEMORY**: Last memory allows you to resume the playback of a film where you last stopped it.

▶ 5 ▶ DVD/CD Player

▶ TV DISPLAY

This option allows you to switch among 4:3 Panscan 4:3 letterbox and 16:9 Large.

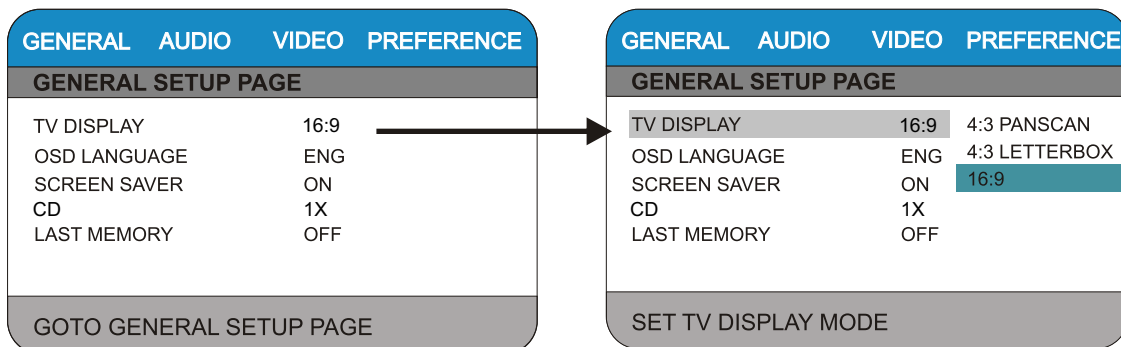

The following diagram allows you to see the differences among the proposed formats.

IMAGES	ECRAN TV		
	4:3		16:9
	Pan Scan	Letterbox	
4:3 			
16:9 			



5

▶ DVD/CD Player

▶ **OSD LANGUAGE**

This option allows you to select a menu display language.
You can select 3 languages: Italian, English, and Spanish.

GENERAL	AUDIO	VIDEO	PREFERENCE
GENERAL SETUP PAGE			
TV DISPLAY		16:9	
OSD LANGUAGE	ENG		
SCREEN SAVER	ON		
CD	1X		
LAST MEMORY	OFF		
GOTO GENERAL SETUP PAGE			



GENERAL	AUDIO	VIDEO	PREFERENCE
GENERAL SETUP PAGE			
TV DISPLAY		16:9	ENGLISH
OSD LANGUAGE	ENG		SPANISH
SCREEN SAVER	ON		ITALIAN
CD	1X		
LAST MEMORY	OFF		
SET OSD LANGUAGE			

▶ **SCREEN SAVER**

This option allows you to activate the screen saver to prevent damage to the TV.

GENERAL	AUDIO	VIDEO	PREFERENCE
GENERAL SETUP PAGE			
TV DISPLAY		16:9	
OSD LANGUAGE	ENG		
SCREEN SAVER	ON		
CD	1X		
LAST MEMORY	OFF		
GOTO GENERAL SETUP PAGE			




GENERAL	AUDIO	VIDEO	PREFERENCE
GENERAL SETUP PAGE			
TV DISPLAY		16:9	
OSD LANGUAGE	ENG		
SCREEN SAVER	ON		ON
CD	1X		OFF
LAST MEMORY	OFF		
SCREEN SAVER			

▶ 5 ▶ DVD/CD Player

▶ LAST MEMORY

This option allows you to resume a film playback where it had been stopped. To achieve that, you must first activate this function.


Note: This function can only be operated on Video DVDs.

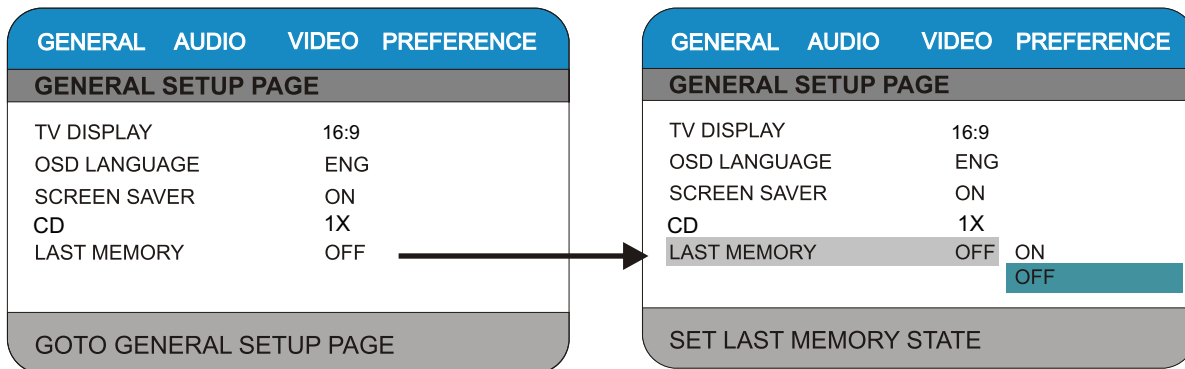

▶ 5.8 Audio Setup Menu


▶ ANALOG AUDIO SETUP

This option allows you to set up the analog outputs.

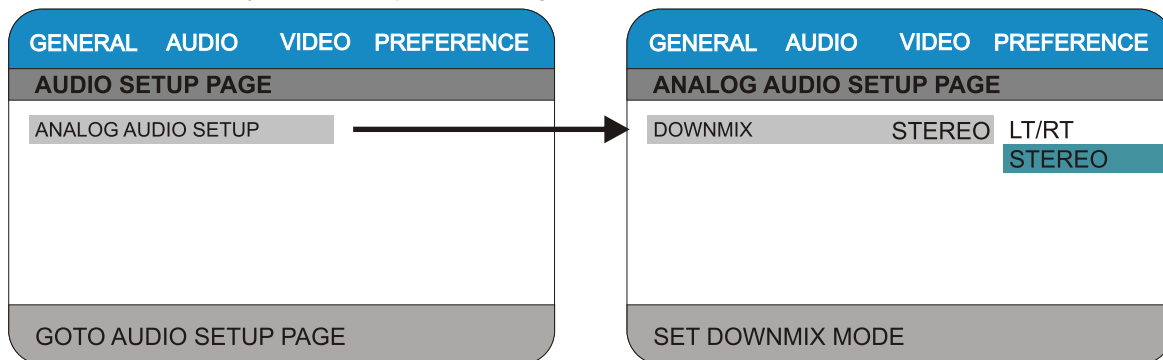

▶ 5.9 Video Setup Menu

The sub-menu 'Video Setup' allows you to parameterize the video appearance of the player.

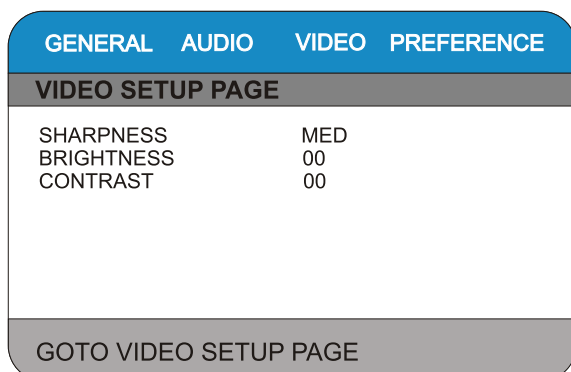




5

▶ DVD/CD Player

1. **SHARPNESS**: this option allows you to set the image sharpness and quality.
2. **BRIGHTNESS**: this option allows you to set the image brightness.
3. **CONTRAST**: this option allows you to set the image hue.


▶ **SHARPNESS**

This option allows you to set the image sharpness and quality. You can choose among high, middle and low.

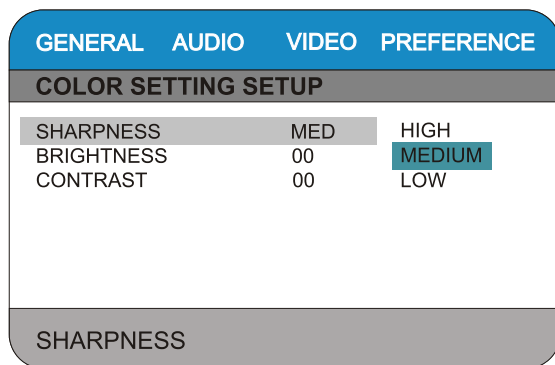

▶ **BRIGHTNESS**


This option allows you to set the image brightness. You can set the brightness between -20 and +20. The more negative you set, the more the brightness decreases. The setting can be performed with the ◀ and ▶ buttons on the remote control or on the player.

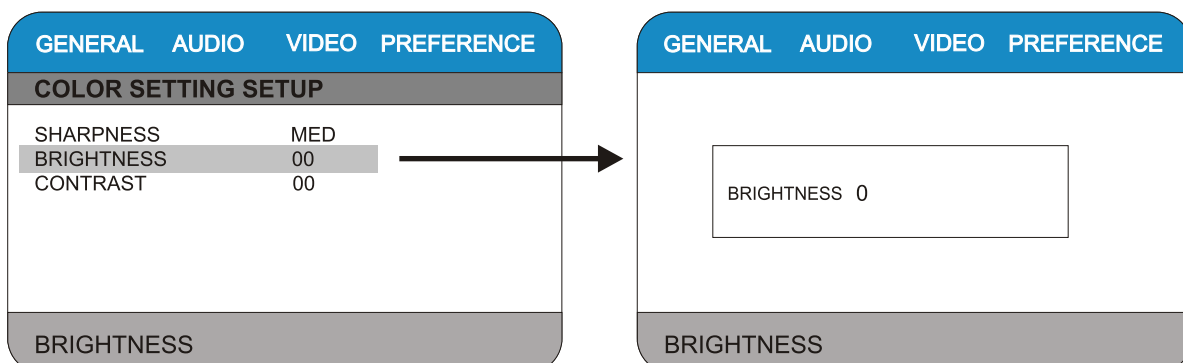

▶ **CONTRAST**

This option allows you to set the image contrast. You can set the contrast between -16 and +16. The setting can be performed with the ◀ and ▶ buttons on the remote control or on the appliance.


▶ 5 DVD/CD Player

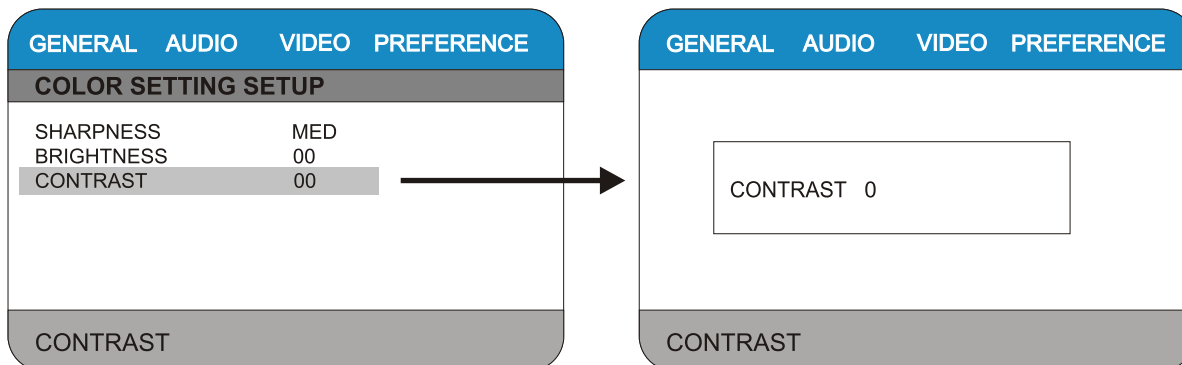

▶ 5.10 Preference Setup Menu

The 'Preference Setup' sub-menu allows you to customize the audio/video setup to your preferences.

Note: To enter this sub-menu, please be sure there is no disc inside the player.

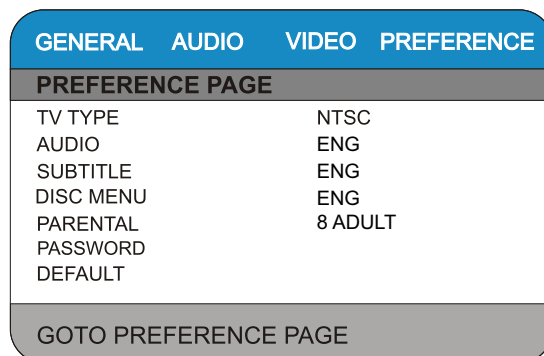

1. **TV TYPE:** this option allows you to switch from the PAL colour standard to NTSC.
2. **AUDIO:** this option allows you to select the default audio track when starting a video DVD. you can choose between English, Italian, Spanish.
3. **SUBTITLE:** this option allows you to select the default subtitles language. You can choose between English, Italian, and Spanish.
4. **DISC MENU:** this option allows you to select the default language of the DVD menu. this option can only be operated if the DVD has a menu.
5. **PARENTAL:** This option allows you to parameterize the parental language of the DVD menu.
6. **PASSWORD:** This option allows you to change the password of the parental lock.
7. **DEFAULT:** This option allows you to reboot the default settings of the appliance.

▶ TV TYPE

This option allows you to switch from the PAL colour standard to NTSC. The DVD players use a PAL or NTSC signal in video output. If you notice a image in black and white on your TV screen your TV is still in SECAM mode when the DVD transmits a PAL signal. you must switch your TV in PAL mode.

▶5

▶ DVD/CD Player

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	PAL
AUDIO		ENG	NTSC
SUBTITLE		ENG	AUTO
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			

▶ **AUDIO**

This option allows you to select the default audio track when starting a Video DVD. You can choose between English, Italian, and Spanish.

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO	ENG		ENGLISH
SUBTITLE		ENG	SPANISH
DISC MENU		ENG	ITALIAN
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
PREFERRED AUDIO LANGUAGE			

▶ **SUBTITLES**

This option allows you to select the subtitle languages. You can choose between English, Italian, and Spanish.

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE	ENG		ENGLISH
DISC MENU		ENG	SPANISH
PARENTAL		8 ADULT	ITALIAN
PASSWORD			OFF
DEFAULT			
PREFERRED SUBTITLE LANGUAGE			

▶ **DISC MENU**

This option allows you to select the default language of the Video DVD menu.

Note: This option can only be operated if there is a menu on the DVD.

▶ 5 DVD/CD Player

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	ENGLISH
SUBTITLE		ENG	SPANISH
DISC MENU		ENG	ITALIAN
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
PREFERRED MENU LANGUAGE			

▶ PARENTAL LOCK

This option allows you to parameterize the parental lock among different choices:

- | | |
|------------------------|-------------------------|
| 1. Children | 5. Parent necessary |
| 2. All public | 6. Adults |
| 3. Parental control | 7. Available for +17y.o |
| 4. Forbidden to -13y.o | 8. Advised public |

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	1 KID SAF
AUDIO		ENG	2 G
SUBTITLE		ENG	3 PG
DISC MENU		ENG	4 PG 13
PARENTAL		8 ADULT	5 PGR
PASSWORD			6 R
DEFAULT			7 Nc17
8 ADULT			
SET PARENTAL CONTROL			

▶ DEFAULT

This option allows you to reset to the default settings of the device.

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			RESET
LOAD FACTORY SETTING			

▶ PASSWORD

This option allows you to change the password of the parental lock.

▶ 5 ▶ DVD/CD Player

GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			




GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
TV TYPE		PAL	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL		8 ADULT	
PASSWORD			CHANGE
DEFAULT			
CHANGE PASSWORD			

The default password is:8806.
To change the password, type your
new password in the corresponding
fields and confirm.


GENERAL	AUDIO	VIDEO	PREFERENCE
PREFERENCE PAGE			
OLD PASSWORD			
NEW PASSWORD			
CONFIRM PWD			
OK			

▶ 6 ▶ USB/CARD Reader


▶ 6.1 USB/CARD




Switch on the player

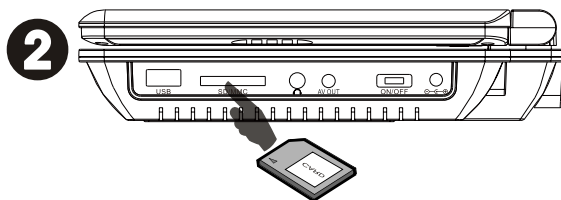

Insert the SD/MMC card in the slot located at the side of the player

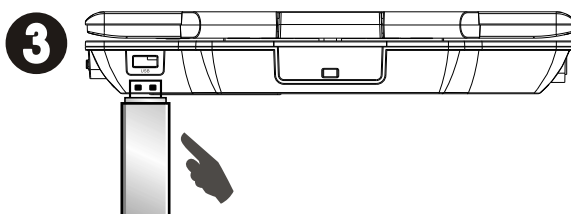

Insert the USB in the slot located on the back of the player

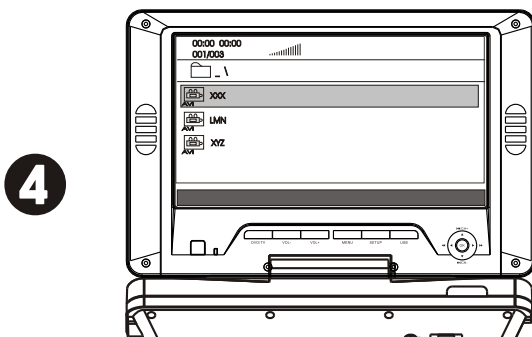


Switch device to DVD/DTV/ATSC mode. Then, insert USB or SD/MMC card, and press the USB button on your remote control or on the device. A menu will be displayed on the screen as above picture. Select the file that you want to play with the ▲ or ▼ arrows on your remote control or with the ◀ or ▶ arrows on the player then press ENTER.

Note: You must use Card/USB under DVD mode, and please be sure there is no disc in running. Then, Insert USB/Card first, press USB/Card to switch the right mode that you want to playback your media files.

▶ 7 ▶ AV output

▶ 7.1 AV output connection

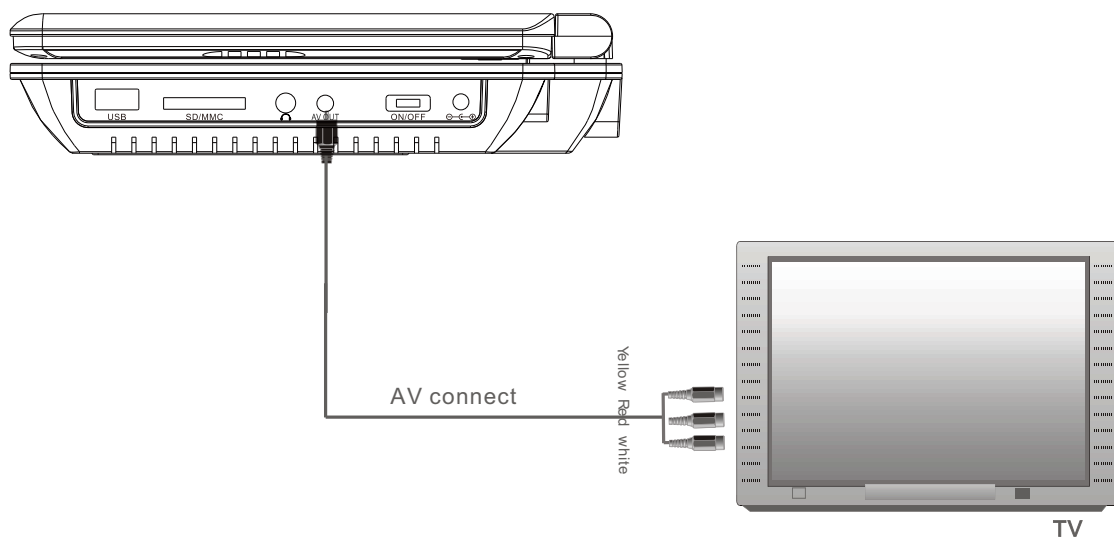

Notice: Please turn off all devices before connection.

As shown in the picture, use the A/V cable to connect the portable TV player with other devices.

Switch the portable TV player to AV mode.

▶ 8 ▶ Troubleshooting

▶ 8.1 Reason and Solution

If you come across any difficulty with your appliance, please observe the troubleshooting guide below:

Problems	Solutions
The remote control does not work.	-Check the remote control battery. Change them if necessary -Use the remote control at a distance less than 6 meters. -Remove the battery and hold one or several keys for a few minutes to reboot the remote control processor. Replace the battery and try again.
The Unit does not work.	-Is the power cord connected to the device? -Make sure that the power switch is not enabled on OFF Position.
The disc playback does not operate.	-Check the disc installation: label side up -Is the disc compatible with the format supported? -Is the other disc dirty or scratched?
The  icon is displayed on the screen.	-This icon is displayed when you want to enable some functions which are not compatible with the format of the disc being played.
The screen aspect ratio cannot be changed.	-The display aspect ratio is set according to its recording on the DVD.
No sound.	-Make sure that the Digital Output selection is correctly enabled in the AUDIO menu.
No signal found.	-Antenna is disconnected / damaged / out of digital signal area. Please check antenna, or move it to another area which can get a better signal.
Scrambled channel message.	-Channel is scrambled.
After moving the unit to another room you find you are no longer able to receive reception.	-It is helpful to position the magnetic external antenna by a window, a doorway, or an external wall to pick up the maximum amount of reception in a room.



9

► Technical Specifications

DVD	
Compatibility	DVD/VCD/CD/MPEG4/DIVX
Screen size	9 inches (23cm)
Frequency range	From 20Hz to 20KHZ
Sound pressure	+ 85dB
Power source	DC 9-12V
Consumption	9W
Operation condition	5~40
Built-in Battery type	Li Polymer
Dimension	10.6 x 7.5 x 1.8 inches (w/d/h)
Weight	38.7 oz (1100g)
ATSC	
Receiver Standard	ATSC Air
ATSC Band	Air: VHF 2~13CH ;UHF 14~69CH
Transport Stream	MPEG-2 ISO/IEC13818
Profile Level	MPEG-2 MP@HL
MPEG Decoding	MPEG-I &MPEG-II
Decode All A-53/A-54 Broadcast Formats	All Standard Formats

Warranty Terms and Conditions

Envizen Digital ("Envizen") warrants your Envizen products against defects in material and workmanship during the warranty period from the original date of purchase, subject to the following terms and conditions. If a product proves to be defective in material or workmanship during the warranty period, Envizen will, at its discretion, repair or replace the product with the same model provided the purchaser adheres to certain return authorization procedures and guidelines.

Warranty Period

All Envizen televisions/media players/DVD players/speaker systems/digital photo frames are warranted for one (1) year for parts and ninety (90) days for labor, starting from the original date of purchase/invoice. After warranty period, the customer is responsible for parts and labor charges. Rechargeable batteries are warranted for ninety (90) days for parts and labor. Non-rechargeable batteries are not covered by warranty. A new warranty does not start with the replacement of a new product.

This Warranty Does Not Apply to:

1. Any product, on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a) Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - B) Repair or attempted repair by anyone not authorized by Envizen.
 - c) Any damage of the product due to shipment.
 - d) Removal from or installation to the product.
 - e) Causes external to the product, such as electric power fluctuations or failure.
 - f) Use of supplies or parts not meeting Envizen's specifications.
 - g) Normal wear and tear
 - h) Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, gouges or any other defacement
4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LCD Module
5. No Defect Found (product returned to Envizen as defective but failure is not duplicated by Envizen's test method).
6. Product without proof of purchase. (The proof of purchase should be one of the following documentations:
purchase receipt, gift receipt, sales invoice, and packing list that contains the product model number, price, vendor, and purchase date.)
7. Any damage caused by battery leakage.

How to Get Warranty Service

1. To obtain the warranty service, you will be required to reach Envizen's Customer Service by phone at 1-866-709-1999 or by email at service@envizendigital.com for assistance.
You will be asked to provide the following information:
 - a) Customer information (name, day-time phone number, e-mail address and/or residential address)
 - b) Proof of purchase (purchase receipt, gift receipt, sales invoice, order No#, and/or packing list)
 - c) Product model number
 - d) Product serial number
 - e) A description of the problem
 - f) Payment information (If any payment is required, you will be asked to provide this information beforehand. At this moment, we only accept personal check, money order, credit card or cashier's check. Sorry for the inconvenience.)
2. We will issue you an RMA number for your returned item. Please take or ship product with the RMA number to Envizen service center. All products should be returned in secured packaging, preferably in the original package, with the complete set of accessories.
3. Upon receiving the product, depending on the condition of the defects, Envizen will repair or replace product, and ship it back to the customer within 2~4 weeks.
4. For additional information, please contact Envizen Customer Service.

Out of Warranty Repair

For additional information on obtaining an extended warranty service, contact Envizen Customer Service Department by e-mailing service@envizendigital.com or call 1-866-709-1999.

Products out of warranty requiring replacement will be reviewed individually, but all will require the shipping and handling fee.

During the period of product warranty, we will answer your basic configuration, setup and troubleshooting questions; and when necessary, we will provide you with all the instructions on how to return your product for repair. For more customer service and support inquiries, please call 1-866-709-1999 or e-mail to us at service@envizendigital.com.

